



How to Read a TPMS Sensor with the H47 TPMS Tool




Choose CHECK SENSOR on the main menu



Select the vehicle's MAKE



Select the vehicle's MODEL

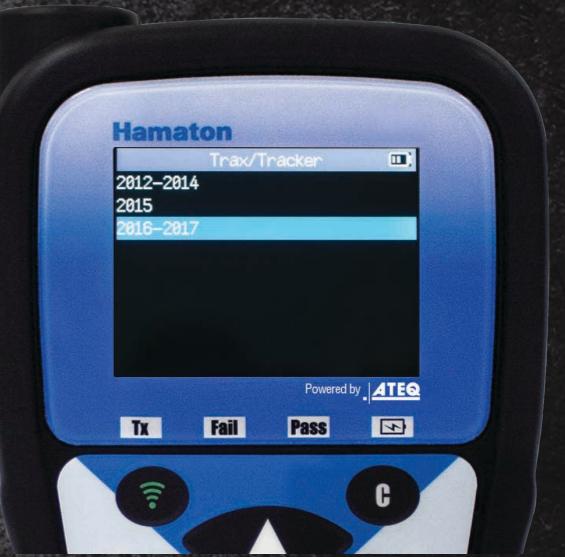

Select the vehicle's YEAR OF MANUFACTURE



Choose the tire using the arrow keys



Place the tool on the sidewall near the valve



Press the green trigger button



The tool will display the sensor's ID, battery status and frequency besides the tyre's pressure and temperature

For More Information



+44 (0) 116 200 1020



info@tyresure.com



www.tyresure-tpms.com



@Tyresure TPMS